GB WAT 9565 WP / WAT 9569 WP

PROGRAMME TABLE

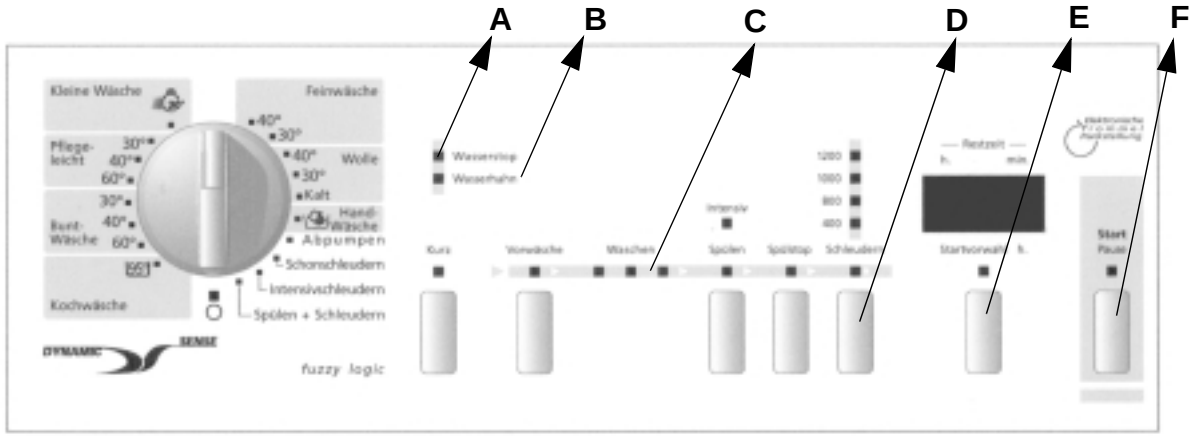

A. Waterstop indication
B. Water tap indication
C. Programme sequence indication



D. Spin speed reduction button
E. Start Delay button
F. Start/Pause button

Programme	Type of fabrics / Degree of soiling / Notes	Max. Load	Detergent and Additives			Options						Temperature	Spin Speed
			Pre-wash	Wash	Softener	Rapid	Pre-wash	Intensive Rinse	Rinse Hold	Spin speed reduction	Start Delay		
		kg	I	II	❀							°C	rpm/min
Cotton *Kochwäsche*	Averagely soiled, hard wearing and temperature stable textiles in cotton and linen (bed linen, table linen, underwear, shirts etc.). The max load for heavily soiled laundry is 3.5 kg.	Normal 5.0 Rapid 3.0	Yes	Yes	❊	❊	❊	❊	❊	❊	❊	95	Min. to 1200
Coloured Cotton *Bunt-Wäsche*	Averagely soiled, hard wearing and temperature stable textiles in cotton and linen (bed linen, table linen, underwear, shirts etc.).	Normal 5.0 Rapid 3.0	Yes	Yes	❊	❊	❊	❊	❊	❊	❊	30-40-60	Min. to 1200
Synthetic *Pflegeleicht*	Lightly or averagely soiled blouses, skirts, etc. made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or cotton blends.	Normal 2.5 Rapid 1.5	Yes	Yes	❊	❊	❊	❊	❊	❊	❊	30-40-60	Min. to 1000
Chrono programme *Kleine Wäsche*	Lightly soiled outer garments and sportswear made of cotton, polyester, polyamide and cotton blend.	3.0	—	Yes	❊	—	—	—	❊	❊	❊	30	Min. to 1200
Delicate *Feinwäsche*	Delicate curtains, dresses, skirts and blouses.	1.5	Yes	Yes	❊	—	❊	—	❊	❊	❊	30-40	Min. to 1000
Wool *Wolle*	Only machine washable woollens with pure new wool label. If you select the special function “Rinse Hold” do not leave garments to soak for too long.	1.0	—	Yes	❊	—	—	—	❊	❊	❊	Cold-30-40	Min. to 1000
Handwash *Hand-Wäsche*	Silk and other textiles, which are labelled with “Handwash”. For improved garment care the spin speed is restricted to 400 rpm. For no spin, select the option “Rinse Hold”. When the option light is flashing, turn the programme selector to “Drain” and press the “Start/Pause”.	1.0	—	Yes	❊	—	—	—	❊	—	❊	30	No spin to 400
Rinse + Spin *Spülen + Schleudern*	Programme for treating wash with starch or softener. Terminates with an intensive spin cycle.	5.0	—	—	❊	—	—	—	❊	❊	❊	Cold	Min. to 1200
Intensive Spin *Intensivschleudern*	Programme for Intensive spin cycle.	5.0	—	—	—	—	—	—	—	❊	❊	—	Min. to 1200
Gentle Spin *Schonschleudern*	Programme for gentle spin cycle.	1.5	—	—	—	—	—	—	—	❊	❊	—	Min. to 1000
Drain *Abpumpen*	Drain only, without spin cycle. Alternative way of terminating programmes with “Rinse Hold” setting.	—	—	—	—	—	—	—	—	—	❊	—	—

N.B.: This appliance is controlled by sensors. The excess of detergent in the dispenser could cause technical problems.

CONSUMPTION DATA					
Programme	**Temperature selector (°C)**	**Rated Load (kg)**	**Water (l)**	**Energy (kWh)**	**Programme duration (min) ***
Cotton	95**	5.0	49*	1.60	125
Coloured Cotton	60	5.0	48	0.95	120
Synthetic	60	2.0	54	0.70	89
Synthetic	40	2.0	50	0.50	74
Chrono programme	30	3.0	35	0.40	30
Delicate	40	1.5	50	0.50	45
Wool	40	1.0	50	0.50	42
Handwash	30	1.0	35	0.40	25

Prewash cycle increases programme duration by 5 to 20 min. Consumption values were measured in normalized conditions in compliance with Standard IEC 60 456. Consumption data in the home may vary with respect to the values in the table in relation to the water supply pressure and temperature, the load and the type of wash.
***The remaining time indicator can similarly deviate from the values in the table, because it takes into account the household conditions applicable at that time. ****To reduce the water temperature, some cold water is added at the end of the main wash cycle, before the pump drains the water out.

ADDING DETERGENT AND ADDITIVES

Add the detergent and the additives into the dispenser as follows:

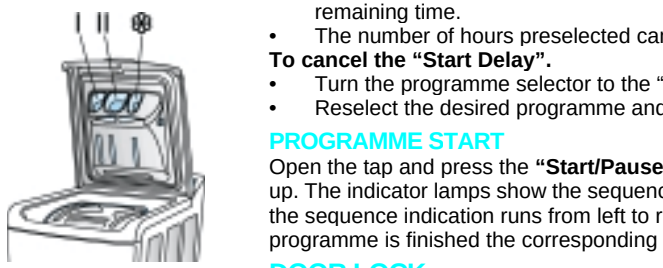

- Programme with pre and main wash
- Main wash programme without prewash
- Fabric softeners and conditioners
- Stain remover agents
- Anti-scale agents (water hardness 4)

Important:
- Be careful not to fill more than the **"MAX"** level mark.
- For programme with prewash: do not use liquid detergents.
- For programmes without prewash from cold to 40° C it is recommended to use a liquid detergent to avoid whitish residues on the coloured laundry.
- With a Start delay, use a dose aid for liquid detergent, placed directly in the drum.

CLOSE THE DOOR AND SELECT THE PROGRAMME

1. Turn the **programme selector knob** to the desired programme with its predefined temperature.
   - The remaining time display shows the duration of the chosen programme (in hours and minutes) and the pilot lamp of the **"Start/Pause"** button is flashing.
2. The programme sequence and the predefined spin speed indication corresponding to the selected programme lights up.

PRESS ANY DESIRED OPTION BUTTON(S). The pilot lamp lights up.

An audible tone sounds if the combination of programme and additional options is not possible. Unsuitable combinations of options are deselected automatically

"Rapid" button
- For quick, economical washes. Ideal for minimum loads of lightly-soiled articles.

"Prewash" button
- Only for heavily soiled loads (for example sand, granular dirt) sensible. The cycle time increases from 5 to 20 min.

"Intensive Rinse" button
- The water level and the cycle time increase for improved rinsing efficiency.
- This option is particularly suitable for areas with very soft water washing baby linen and helps people with allergies.

"Rinse Hold" button
- The laundry remains in the last rinse water without progressing to the final spin cycle to avoid creasing and prevent colours from changing.
- This option is particularly recommended for the programme "Synthetic" or "Delicate".
- This function is particularly useful if you want to postpone spinning to a later time.

Note: The programme stops to "Rinse Hold" at the time the "Rinse Hold" button light flashes

Terminate the "Rinse Hold" option:
- Press the "Rinse Hold" button again; the programme will terminate automatically with the final spin cycle for the present wash programme.
- If you do not wish to spin the clothes, turn the programme selector knob to the drain programme and "Start" again.

"Spin speed reduction" button
- Every programme has an automatic predefined maximum spin speed.
- Press the button to set another spin speed.
- If no lamps are on, the final spinning is cancelled.

START DELAY

The Start Delay allows to run the machine at the consumer's convenience, for example at night when electricity is cheaper.
- Press the "Start Delay" button to select the delay time by 1 to 19 hours;
- Press the **"Start/Pause"** button. The "Start Delay" light flashes until the programme starts.
- The time delay indication disappears when the programme starts and it's replaced by the remaining time.
- The number of hours preselected can later be reduced pressing again the "Start Delay" button.

To cancel the "Start Delay".
- Turn the programme selector to the "○" position.
- Reselect the desired programme and options and press the **"Start/Pause"** button.

PROGRAMME START

Open the tap and press the **"Start/Pause"** button. The pilot lamp of the **"Start/Pause"** button lights up. The indicator lamps show the sequence reached in the programme. After starting the programme, the sequence indication runs from left to right through Wash, Rinse, Spin. When the sequence of the programme is finished the corresponding lamps goes out.

DOOR LOCK

During the running programme the door can be opened for adding further laundry.
The door locks automatically in all rinsing and spinning cycles. If the programme is stopped or the electrical power supply is terminated, the door lock will open after approximately 1 minute.

PROGRAMME END

- The remaining time is on "0:00" and all the lights of the programme sequence indication are "Off". A short audible tone sounds three times.

1. Turn the programme selector to the position "○".
2. Turn the water supply tap off.
3. Open the door and the drum flaps and unload the machine.

SELECTING A NEW PROGRAMME, SPIN SPEED, OPTIONS AFTER PROGRAMME START

1. Press the **"Start/Pause"** button to pause the programme. The light flashes.
2. Select the new programme (with temperature), any options and another spin speed if you want it.
3. Press the **"Start/Pause"** button again. The programme continues at the same position of the programme sequence indication. Do not add detergent for this programme.

TO STOP, RESET A PROGRAMME BEFORE THE END

1. Press the **"Start/Pause"** button to pause the programme. The lights flashes.
2. Set the programme selector to "Drain". The spin indications are off and the remaining time shows 2 minutes.
3. Press the **"Start/Pause"** button to start the drain programme.

AUTOMATIC SAFETY FUNCTIONS / FAULTS

This washing machine is equipped with automatic safety functions which detect and diagnose faults at an early stage and react appropriately. Often, however, the faults detected are small enough to be solved in a matter of minutes. Informations can be found in the "Troubleshooting Guide".